INSTALLATION OF THE ISO COMBUSTION CHAMBER HOOD IN HKD 2.2 / HKD 2.6 SHORT

The ISO combustion chamber hood for HKD 2.2 short consists of only one part, which has to be placed above the inner linings of the stove.

The ISO combustion chamber hood must be inserted before assembling the upper row of the inner linings and must be retained using a special tool. This special tool is a wire holder, installed as shown on picture. Before placing the wire holder it is necessary to make sure, that the ISO hood fits exactly within the cast iron hood of the stove. When the wire holder is correctly installed, the vermiculite hood cannot be damaged when hung on it!

The ISO hood is installed above the chamotte inner linings of the main combustion chamber. It is necessary to have a flat surface for installation; put a strap of mortar on top of the inner linings.

If the stove is equipped with EOS electronic control, and you must place the thermocouple inside the dome, the hole for installation of the thermocouple is made after placing the cast iron dome, by inserting a sharp pointed tool through the provided connecting hole.

Don't forget: The sticker with charge number must be placed on the product data sheet of the stove/fireplace insert!

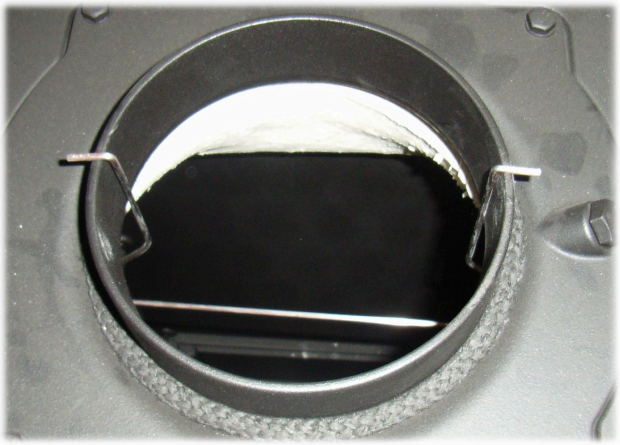


Illustration 1: ISO hood with wire holder

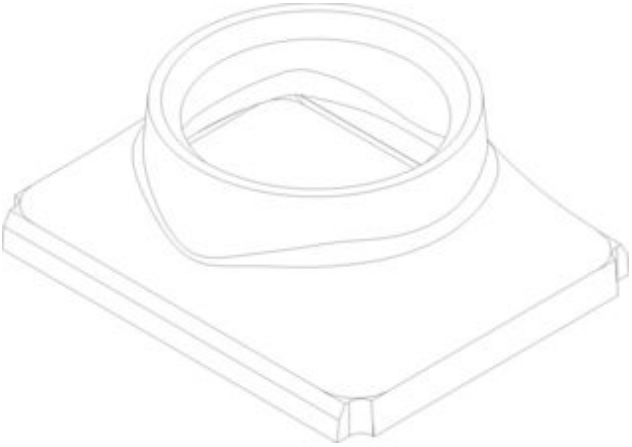


Illustration 2: ISO hood

Do not use high-speed tools if machining is necessary. Wear a face mask and ventilate the room well.

Ulrich Brunner GmbH

Zellhuber Ring 17-18
D-84307 Eggenfelden
Tel.: +49 (0) 8721/771-0
Fax: +49 (0) 8721/771-100
Email: info@brunner.de

Art.-Nr.: 200031

© 2017 Brunner GmbH