INSTALLATION OF DOOR FRAME / MOUNTING FRAME HKD 2.2

Delivery contents

The door frame package for HKD 2.2 includes the ordered frame type, a pack of screws and this leaflet.

Assembly

The frame must be mounted after the fireplace/ tiled oven assembly has been completed. To avoid stains resulting from touching the frame with unclean fingers, remember to wear cotton gloves.

Break out carefully the pre-punched notches for the top and bottom door hinges.

Place the frame over the front of HKD 2.2 and fix it with the attached screws (see positions 'A' on dimension drawing).


CAUTION: Due to frequent temperature changes close to the frame, the screws might get loose after some time. Please check the fastening of the screws on a regular basis and tighten them if necessary.

To protect the raw steel frame from corrosion, treat the surfaces regularly with kitchen paper and cleaning oil. (REX cleaning and care oil). If not available, it can also be rubbed thinly with white floor wax. Do not use mortar to fix the frame. Remember to leave some gap for thermal expansion.


Care

To protect the raw steel frame from corrosion, treat the surfaces regularly with kitchen paper and cleaning oil. (REX cleaning and care oil). If not available, it can also be rubbed thinly with white floor wax.


When using wax or oil as a spray, be sure never to spray in embers or flames.

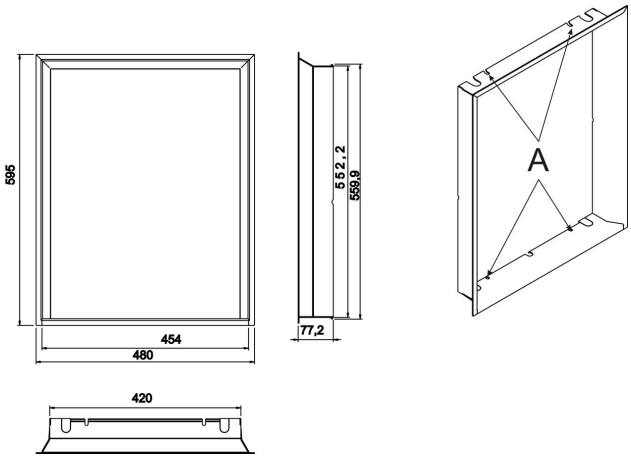


Illustr. 1: Door frame HKD 2.2

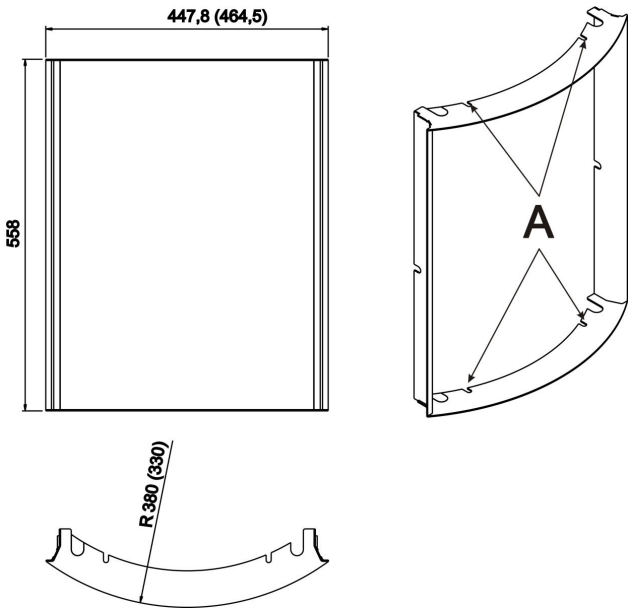


Illustr. 2: Mounting frame HKD 2.2r

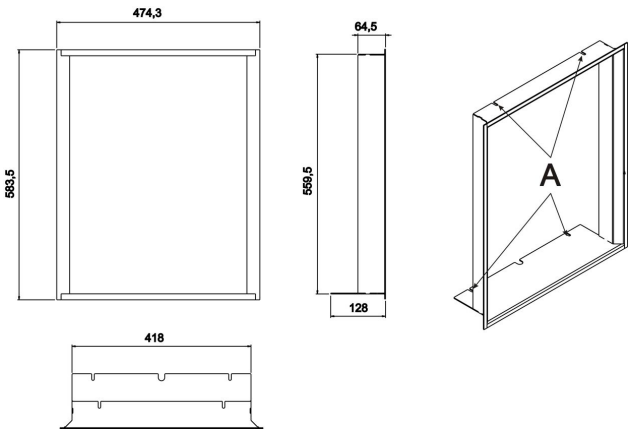

Illustr. 3: Door frame HKD 2.2 Lifting door

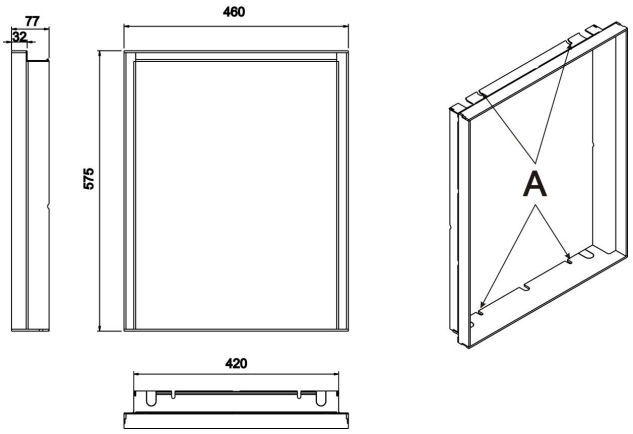

Illustr. 4: Mounting frame HKD 2.2

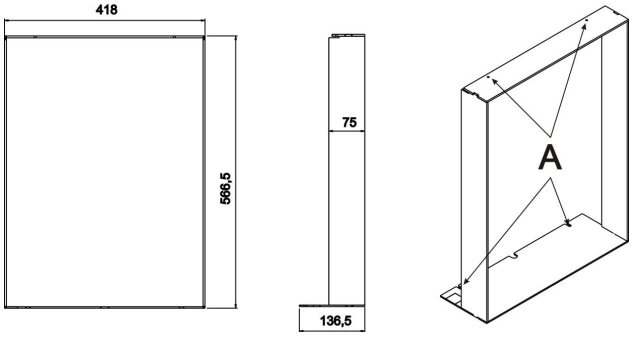

Illustr. 5: Mounting frame HKD 2.2 70 mm

Ulrich Brunner GmbH

Zellhuber Ring 17-18
D-84307 Eggenfelden
Tel.: +49 (0) 8721/771-0
Fax: +49 (0) 8721/771-100
Email: info@brunner.de

Art.Nr.: 200027

 © 2015 Brunner GmbH